


## **Technical Data Sheet**

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

# MG series INCLINED LIQUID COLUMN MANOMETERS

Pressure / Depression

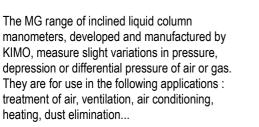



#### **KEY POINTS**

- Zero adjustement by moving the slide strip
- · Safety reservoir enabling momentaneous overshooting of the scale
- Integrated spirit level for adjusting horizontality
- Supplied with a white PVC support, two screws and two rawplugs, two 487 connectors and a bottle of AWS 10 liquid


#### MEASURING RANGE

Reference	Measuring range*		Sensitivity scale	Resolution
Kelefellee	mm CE	Pascal	For 1 mm CE or 10 PA	
MG 20	0 – 20	0 – 200	8 mm	0,5 mm CE or 5 Pa
MG 50	0 – 50	0 – 500	3 mm	1 mm CE or 10 Pa
MG 80	0 - 80	0 - 800	2.5 mm	1 mm CE or 10 Pa

#### **TECHNICAL FEATURES**

Recommended range of use	From +5 to +30°C	
Possible range of use	From -30 to +60°C	
Maximum static pressure	6 bars	
Manometer body	Transparent 15 mm thick Altuglas	
Liquid column	Entirely bored in the solid block, Ø 4 mm	
Graduated slide strip	Transparent Altuglas. Cross-section 20 X 2 mm	
Zero adjustment	By moving the graduated slide strip, travel 20 mm. Fixed via milled, nickel-plated brass screw	
Positionning	Horizontal positioning via integrated spirit level and milled, nickel-plated brass adjusting screw, vertical travel 12 mm.	
Manometric liquid	AWS 10 red oil, density 0.87 at 15°C	
Reservoir capacity	20 ml	
Connection	Ø 5 X 8 mm semi-rigid crystal tube, on Ø 6,2 mm ribbed, nickel-plated brass connectors, 1/8 gas thread	
Wall-mounted	With or without white PVC support	

#### DIMENSIONS

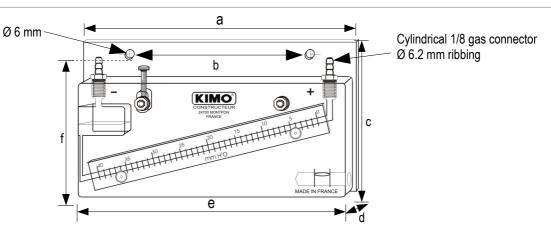

Reference	MG 20	MG 50	MG 80
а	196 mm	178 mm	219 mm
b	128 mm	110 mm	151 mm
С	80 mm	117 mm	154 mm
d	25 mm	25 mm	25 mm
е	192 mm	174 mm	215 mm
f	55 mm	109 mm	129 mm
Weight	320 g	420 g	660 g

#### MOUNTING

- 1. Mount on a wall or a vertical partition wall with two maximum Ø 5 x 25 mm screws (supplied).
- 2. Set horizontality using the integrated level and the milled adjusting screw.
- 3. Unscrew the connector on the reservoir and slowly pour the manometric liquid to zero point on the graduation.
- 4. Remount the connector without overtightening.
- 5. Connect the manometer with the Ø 5 X 8 mm crystal tube to the pressure or depression source to be checked.

#### NOTE :

For a pressure measurement	Connect the crystal tube to the right-hand connector (+)
For a depression measurement	Connect the crystal tube to the left-hand connector (-)
For a differential pressure	Connect the highest pressure to the right-hand connector (+) and the lowest pressure to the left
-	hand connector (-)

#### MAINTENANCE :

MG manometers require no special maintenance other than simply changing the reading liquid once a year.

### www.kimo.fr

AF AQ	
150 9001	

Distributed by :